 



Introduction

This Digital to Analog Audio Converter is designed for either home or professional audio switching. It converts Coaxial or Toslink digital audio signals to analog L/R audio and available for connection to an external device such as an amplifier via standard RCA-style jacks. This converter is small in size and quite easy to install

Indicators

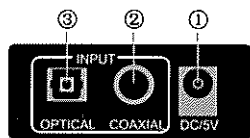

 
Front Panel

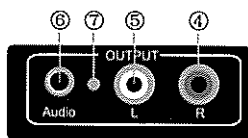

Rear Panel


- ① DC power connector
- ② Digital coaxial audio input port
- ③ Digital toslink audio input port
- ④ R channel analog audio output port
- ⑤ L channel analog audio output port
- ⑥ Analog stereo output port
- ⑦ System status light

 Product Connection Diagram

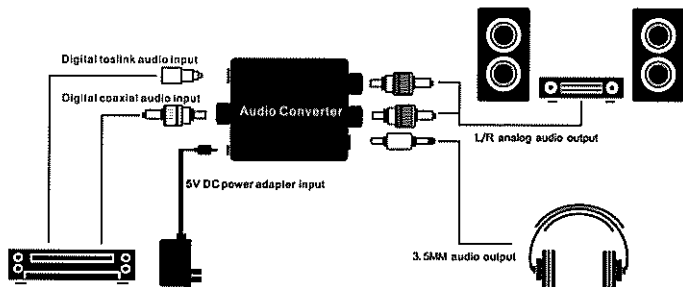

- Packing Content**
- 1. Main Unit
 - 2. 5V DC Power Supply

 DESCRIPTION OF SOUND BAR PVC LENS

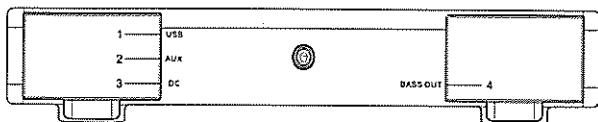


1. USB input
2. AUX function
3. DC IN
4. BASS OUT

4

PACKING LIST

- | | |
|-------------------|----------|
| 1. Subwoofer | : 1 unit |
| 2. Sound bar | : 1 unit |
| 3. Audio Cable | : 1 unit |
| 4. User Manual | : 1 unit |
| 5. Remote Control | : 1 unit |

 DESCRIPTION OF SOUND BAR PVC LENS

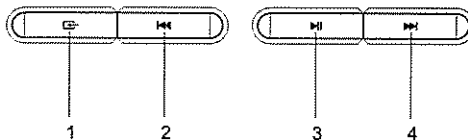


1. Input: Press to select the all modes(AUX/USB/BT).
2. Previous: Press to select the previous song in USB mode.
3. Play/pause: Press to Play/Pause the song in USB mode.
4. Next: Press to select the next song in USB mode.

5

SMATE

SOUNDBAR SPEAKER

 SM1SB2.1

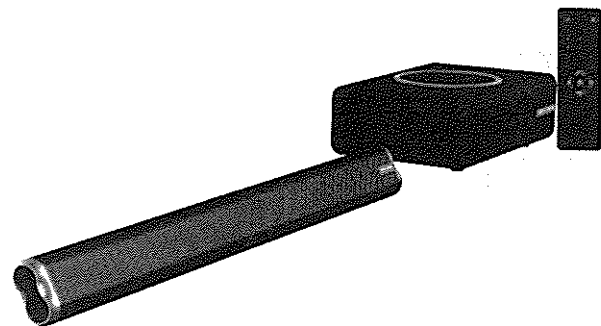

DEAR CUSTOMER
Congratulations on your purchase!
Please read this manual carefully and keep it for future reference

SAFETY PRECAUTION



WARNING:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

*Note: This product is for indoor use only.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions before using the product.
- 2) Read all warnings carefully.
- 3) Follow all instructions carefully.
- 4) Do not use this apparatus near water.
- 5) Clean only with dry cloth.
- 6) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7) Do not install the speaker system near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8) Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- 9) Only use attachments/accessories specified by the manufacturer.
- 10) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, be cautious while moving the cart/unit combination to avoid injury from tip-over.



- 11) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

1

UNIT OPERATION

- 1) First, plug the power cable of woofer to external socket. Plug the power cable of sound bar to external socket, switch on the unit on the woofer.
- 2) Use one set audio cable (2RCA to 3.5MM) to connect external audio source (DVD, mobile, TV), led light turn green.
- 3) Press "input" button exchange to "USB" mode, to play usb card, light turn purple.
- 4) Press "input" button exchange to "BT" mode, light turn blue and flash slowly, open mobile phone, search BT name "Bluetooth Speaker" to connect.

FEATURES

 
- Analog audio input.
- Support USB, card in Mp3 file format.
- Full function remote control.
- Full BT function.
- Built in 3 channel power amplifier.
- Compatible with MP3, MP4, PC, DVD, TV etc.

SPECIFICATIONS

Output Power : 60W
Frequency response : 40Hz-20KHz
Impedance : Subwoofer 4 Ohm, Satellite 40hm
S/N Ratio: ≥ 80 dB
Isolation sensitivity: ≥ 45 dB
Distortion: $\leq 0.3\%$ at 1W output @1KHz
Subwoofer speaker 5.25" system
Satellite speaker 2" system
Power: AC230V 50Hz

2

DESCRIPTION OF THE REMOTE CONTROL

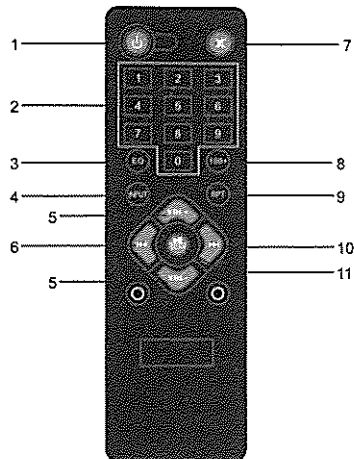

1. STANDBY: press this button to turn on/off the subwoofer
2. 1-0: To choose 1-0 Numerical track
3. EQ MODE/EQ OFF: To choose audio output sound field effect
4. INPUT: cycle selection between input **USB/AUX/BT**.
5. VOLUME+, -: Increase volume or reduce the volume
6. PREV: skip to the previous track
7. MUTE: To mute the sound
8. 100+: to select and play the music track present after the 100 tracks.
9. RPT: Repeat an audio track
10. NEXT: Skip to the next track
11. PLAY/PAUSE: Begin play or pause the USB or SD/MMC

3



WARRANTY CARD

Dear customer

Thank you for purchasing SOMATE product. Your SOMATE product is under warranty in accordance with terms and conditions stated herein.

- ◆ Your units and components contained therein are warranted against defective material and workmanship for a period of 12 months from the date of purchase.
- ◆ To obtain warranty protection, notice of alleged defect must be given promptly upon discovery and warranty card must be presented along with proof of date of purchase to our service personnel at the time of service.
- ◆ The company decision on identification of the defects due to faulty/defective spare parts or faulty workmanship or misuse/abuse shall be final and you shall agree to abide by such decision.
- ◆ The defective parts/material shall be replaced with a functionally working equivalent part/material and defective part/material will become the property of the company.

CUSTOMER COPY

Product : Model No :.....

Serial No.: Date of Purchase:.....

Buyer Name and Address :

Dealer Name and Address:

Dealer stamp

SERVICE CENTER COPY

(To be eligible for warranty send this copy to the company through the dealer)

Product : Model No :.....

Serial No.: Date of Purchase:.....

Buyer Name and Address :

Dealer Name and Address:

LIMITATIONS OF WARRANTY

- Damage resulting from accidents, misuse, abuse, alteration, tempering or failure of the purchaser to follow the normal operating procedure outlined in user manual.
- Defect of damage due to spillage of liquids, due to insect or wrong use of electrical supply and voltage.
- Normal wear and tear, corrosion, rusting or stains.
- Scratches and damage to outer surface areas and externally exposed units or parts that are due to normal customer use.
- Claim for damaged /missing parts after seven days from the original date of purchase
- If any part or parts of the unit are replaced with a part or parts not supplied or approved by company or unit has been dismantled or repaired by any person other than authorized technician.
- Product which has serial number removed or tampered
- If the warranty card is being altered, defaced or erased in any manner whatsoever.

CUSTOMER CARE CENTER

For any query or concerns related to the after sales service, you may please contact us on the number or email mentioned below.

Tel: 1800 082 221 Email: Support@Smate.com.au